



Parts for the Extension Wing Kit



Attach the 1-18" and 1-41" brushes included to each wing.



Attach extension wing brackets to the main frame of the Groomer. Do not tighten.



Attach each wing to the two extension wing brackets. Only tighten to a snug position so that the wings will fully rotate.



Align the frame of each wing with the frame of the Groomer. Fully tighten the two bolts of the extension wing brackets.



Attach the cable bracket to the upright arm of the wheel assembly using the longer bolts included to make up for the added thickness. Attach one end of the cable to the bracket.



Attach the cable sheave bracket to the frame of the Groomer. The sheave bracket should be placed 26-1/2 inches from the outside of the GreensGroomer frame.



Attach the loose end of the cable to the upright arm of each wing.

Your 920 GreensGroomer with 924 Extension Wings are now ready for use. The wings will automatically raise when the tires of the GreensGroomer are lowered for transport. For narrow passages such as bridges or for long distance transports, each wing may be folded up by hand and strapped together for safety.